

THE MIO TV ON DEMAND

USER GUIDE

Contents

1	Introduction	2
2	Highlights of mio TV On Demand	2
3	Navigating the On Demand Interface	2
3.1	Video On Demand Movies	3
3.1.1	Rent a Movie	3
3.1.2	Watch or Resume Playback of a Movie	4
3.2	Season Pass US TV Series	5
3.2.1	Subscribe to a TV Series	5
3.2.2	Watch a TV Series	6
3.3	On Demand Channels	7
3.3.1	Watch an On Demand Programme	7

1 Introduction

mio TV On Demand brings you Singapore's largest library of On Demand titles on an attractive and intuitive interface. Choose from a large selection of content and watch them at your convenience.

This guide will show you how to watch Video On Demand Movies, Season Pass US TV Series, as well as programmes from our On Demand Channels.

2 Highlights of mio TV On Demand

From 8th of October, 2013, enjoy these new features:


- **Gallery View for Movies:** Find and quickly identify your favourite movies with the new Gallery View. The new view displays Movie posters and lets you see more movies at once, so you can get to your content faster.
- **My Rentals & Subscriptions:** Get all your rented On Demand content and subscribed On Demand Channels quickly, simply by accessing *My Rentals & Subscriptions* from the main menu.
- **Recently Watched:** Access and resume playback of recently watched On Demand content, without the pain of searching for the title again. The *Recently Watched* list is accessed through *My Rentals* in *My Rentals & Subscriptions*.

3 Navigating the On Demand Interface

Follow this step-by-step guide to learn how to rent and watch On Demand content.


How to use this guide

- On-screen options such as menu items are highlighted in **bold**.
- Instructions requiring the remote control are represented by the following:

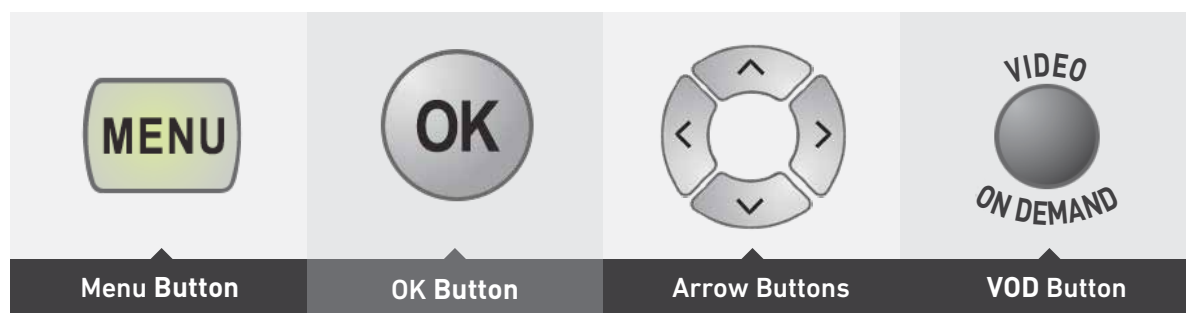

3.1 Video On Demand Movies


3.1.1 Rent a Movie

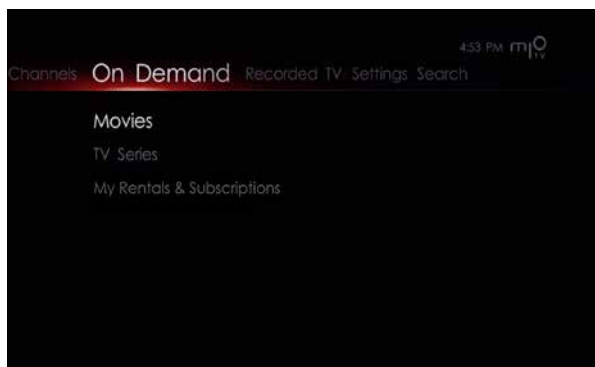

Step 1

Press **MENU** on the remote and use the **>** button on the remote to scroll to **On Demand**. Press **OK** to open **Movies**.

Tip
Alternatively, press **VIDEO ON DEMAND** on your remote to directly open **Movies**.

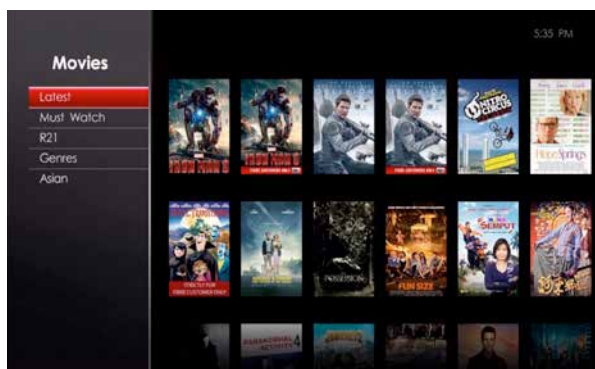

Step 2


Use the **^** **v** buttons to view movies from the different categories.

Step 3

Press **>** to view more movies from the category. Select your desired movie title with **^** **v** **<** **>** the buttons.

Step 4

Press **OK** to display the movie Summary page.

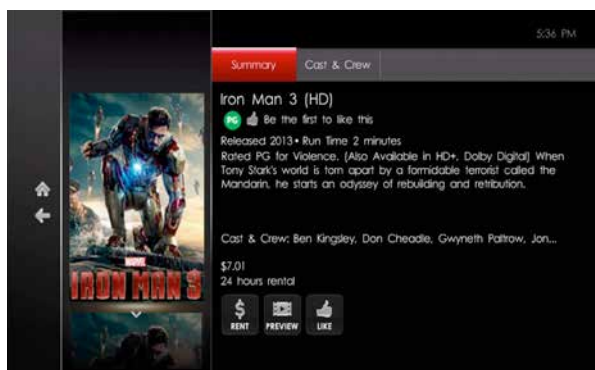

Step 5


Use the **v** button to select **RENT** and press **OK**.

Step 6



To confirm the rental, press **OK**. The movie will start playing immediately.


3.1.2 Watch or Resume Playback of a Movie

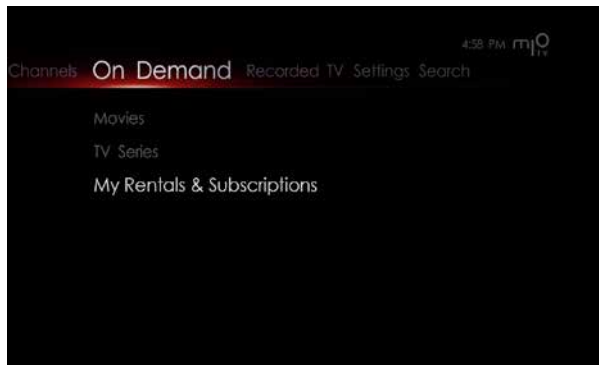On Demand movies are available for viewing up to 48 hours from the time of rental – you can pause a movie and resume playback at anytime in that period. To resume playback of a movie:




Step 1

Press **MENU** on your remote and use the  button to scroll to **On Demand**. Use the  button to select **My Rentals & Subscriptions** and press **OK**.

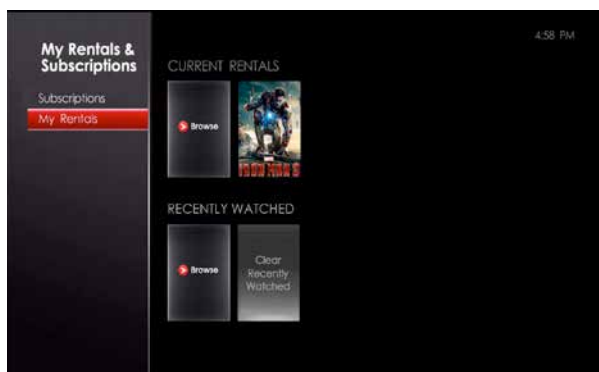






Step 2

Press  to select **My Rentals**, which displays **Current Rentals** as well as **Recently Watched** movies.

Current Rentals contains your rented Movies that are available for viewing.

Recently Watched provides quick access to your last watched On Demand Movies, TV Series and On Demand Channel programmes.


Step 3

Press  and use the     buttons to select your desired movie.

If there are more than two rented movies currently available for viewing, the **Browse** option will appear under **Current Rentals**. Select **Browse** and press **OK** to access all the available titles.

Step 4

Press **OK** to display the movie Summary page.

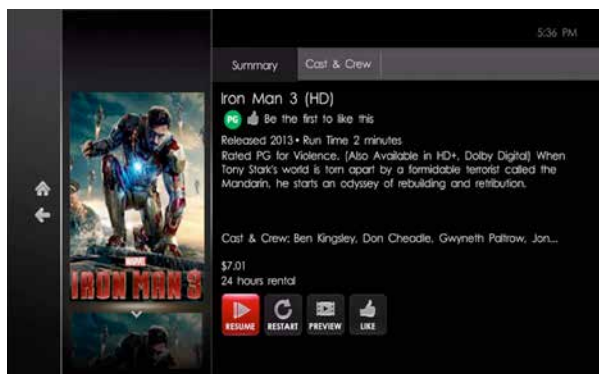


Step 5

Use the button to select **PLAY** or **RESUME**. Press to start or continue watching the movie.

3.2 Season Pass US TV Series

3.2.1 Subscribe to a TV Series

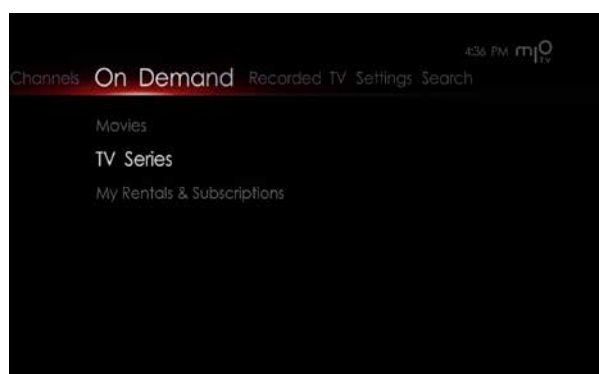

Step 1

Press on your remote and use the button to scroll to **On Demand**. Use the button to select **TV Series** and press .



Step 2

TV series are categorised by alphabetical groups. Press and use the , , , and buttons to select your desired TV Series.

If a category contains more than 7 titles, a **More** option will appear as the last item in that category – select it and press to view more TV series in the category.

Step 3

Press to open the series Summary page.



Step 4

The **RENT** option should be selected.
Press **OK** to subscribe to the TV Series.

Step 5

Choose an offer and press **OK**.

Step 6

Confirm your subscription by selecting **Buy Now**. Press **OK** to subscribe to the series.



Step 7


Once subscription is complete, you will be brought back to the series Summary page. **Browse** should already be selected.

Step 5

Press **OK** to go directly to **My Rentals & Subscriptions**. Follow the instructions in the *Watching TV Series* section of this document to watch the TV Series.


The activation of Season Pass US TV Series may require a few minutes. Upon activation, the titles will be available in **My Rentals & Subscriptions**.

3.2.2 Watch a TV Series

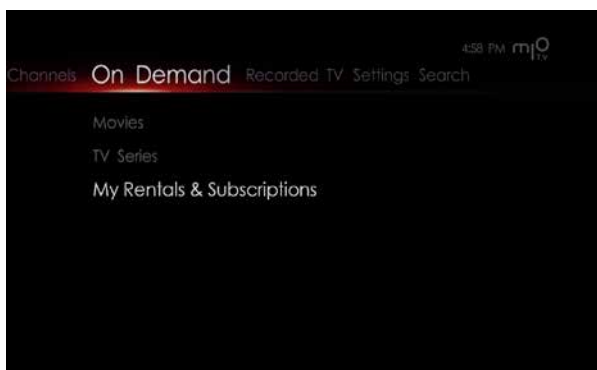

Step 1

Press **MENU** on your remote and use the **RIGHT** button to scroll to **On Demand**. Use the **DOWN** button to select **My Rentals & Subscriptions** and press **OK**.

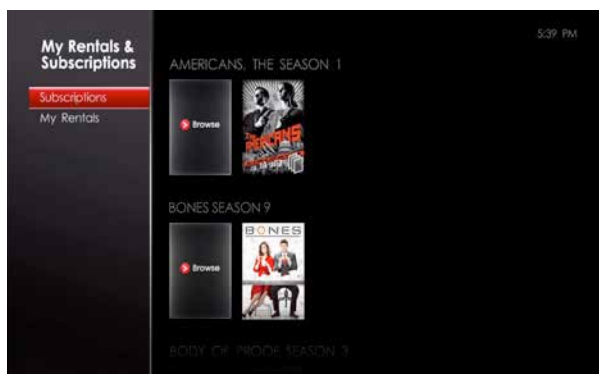

Step 2

Press **>** and use the **^** **v** buttons to scroll through your subscribed TV series and On Demand Channels.

Step 3

Under the desired TV series, select **Browse** and press **OK** to view the available episodes.

Step 4

Use the **^** **v** **<** **>** buttons to select your desired episode. Press **OK** to open the episode Summary page.




Step 5

Select **PLAY** and press **OK**. The episode will begin playing immediately.

3.3 On Demand Channels


3.3.1 Watch an On Demand Programme

To watch subscribed On Demand Channels e.g. *Jia Le On Demand* and *mio Stadium On Demand*:

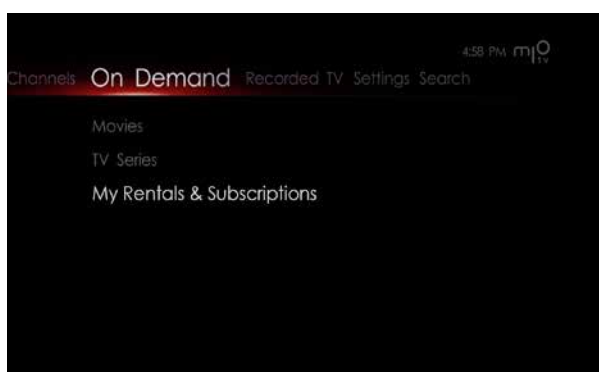

Step 1

Press **MENU** on your remote and use the **>** button to scroll to **On Demand**. Use the **v** button to select **My Rentals & Subscriptions** and press **OK**.

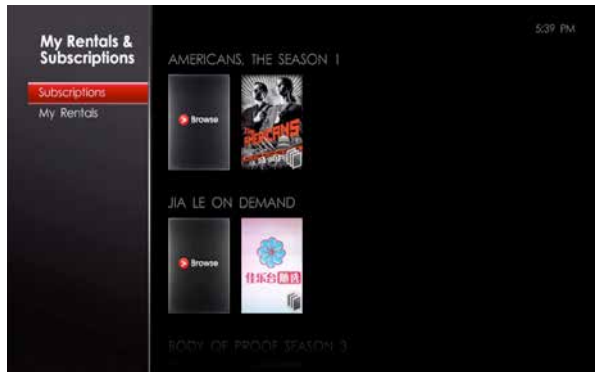

Step 2


Press and use the buttons to scroll through your subscribed On Demand Channels and TV series.

Step 3

Under the desired On Demand Channel, select **Browse** and press to view the channel categories.

Tip

Alternatively, go to the On Demand Channel number using the number pad on your remote. Press to go directly to the channel categories.

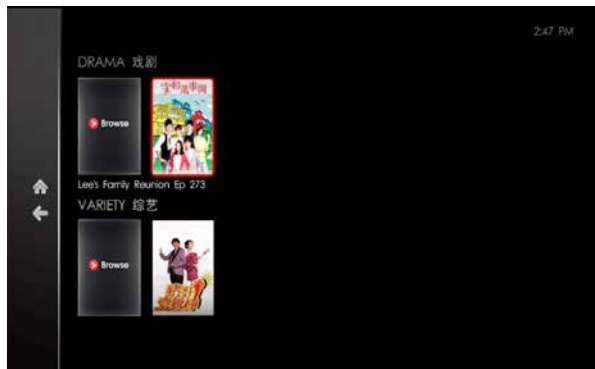

Step 4

Use the buttons to scroll through the different channel categories. If a category contains more sub-categories, a **Browse** option is displayed as the first item. Select it and press to view more sub-categories and programmes.

The latest episode from all programmes in a sub-category is also displayed next to **Browse** for easy access. Select the episode programme and press to open the programme Summary page.

Step 5

Use the buttons to select the episode. Press to access the programme Summary page.



Step 6

Use the button to select **PLAY** and press . The programme will begin playing immediately.